



# Fronus<sup>®</sup>

SOLAR ENERGY

بہر دے اجالا زندگی میں


## USER MANUAL



### XEON 2000VA/3200VA INVERTER / MPPT SCC/AC CHARGER



XEON 2000VA

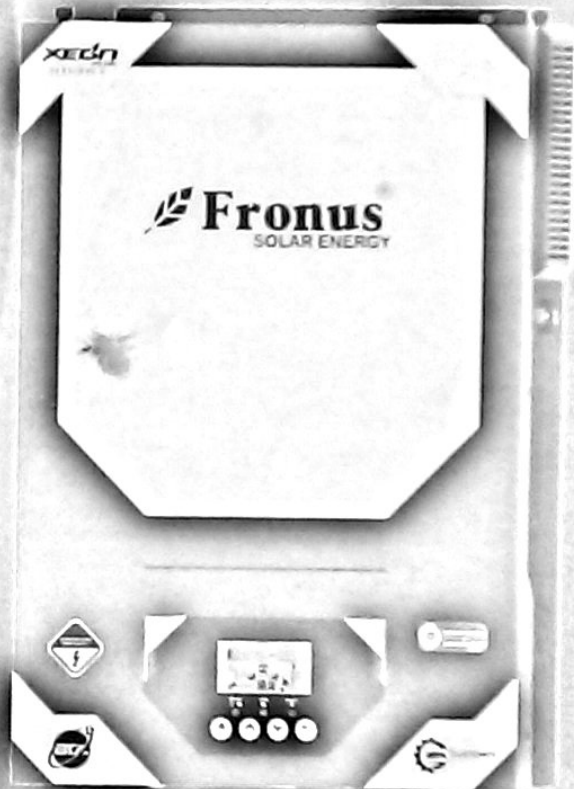

XEON 3200VA



# Table Of Contents

1	ABOUT THIS MANUAL .....	3
1.1	PURPOSE.....	3
1.2	SCOPE.....	3
2	SAFETY INSTRUCTIONS .....	3
3	INTRODUCTION .....	4
3.1	FEATURES.....	4
3.2	BASIC SYSTEM ARCHITECTURE.....	4
3.3	PRODUCT OVERVIEW.....	5
4	INSTALLATION .....	6
4.1	UNPACKING AND INSPECTION.....	6
4.2	PREPARATION.....	6
4.3	MOUNTING THE UNIT .....	6
4.4	BATTERY CONNECTION.....	7
4.5	AC INPUT/OUTPUT CONNECTION.....	8
4.6	PV CONNECTION.....	9
4.7	FINAL ASSEMBLY.....	10
5	OPERATION .....	10
5.1	POWER ON/OFF .....	10
5.2	OPERATION AND DISPLAY PANEL .....	10
5.3	LCD DISPLAY ICONS.....	11
5.4	LCD SETTING .....	13
5.5	DISPLAY SETTING.....	20
5.6	OPERATING MODE DESCRIPTION.....	23
5.7	BATTERY EQUALIZATION DESCRIPTION.....	24
5.8	FAULT REFERENCE CODE.....	26
5.9	WARNING INDICATOR.....	26
6	CLEARANCE AND MAINTENANCE FOR ANTI-DUST KIT .....	27
6.1	OVERVIEW.....	27
6.2	CLEARANCE AND MAINTENANCE .....	27
7	SPECIFICATIONS .....	28
	TABLE 1 LINE MODE SPECIFICATIONS .....	28
	TABLE 2 INVERTER MODE SPECIFICATIONS .....	29
	TABLE 3 CHARGE MODE SPECIFICATIONS.....	30
	TABLE 4 GENERAL SPECIFICATIONS.....	30
8	TROUBLE SHOOTING .....	31

## 4 INSTALLATION

### 4.1 Unpacking and Inspection

Before installation, please inspect the unit. Be sure that nothing inside the package is damaged. You should have received the following items inside of package:

- ☒ The unit x 1
- ☒ User manual x 1
- ☒ DC Fuse x 1
- ☒ Ring terminal x1


### 4.2 Preparation

Before connecting all wirings, please take off bottom cover by removing two screws as shown below.

### 4.3 Mounting the Unit

Consider the following points before selecting where to install:

- Do not mount the inverter on flammable construction materials.
- Mount on a solid surface
- Install this inverter at eye level in order to allow the LCD display to be read at all times.
- For proper air circulation to dissipate heat, allow a clearance of approx. 20 cm to the side and approx. 50 cm above and below the unit.
- The ambient temperature should be between 0°C and 55°C to ensure optimal operation.
- The recommended installation position is to be adhered to the wall vertically.
- Be sure to keep other objects and surfaces as shown in the diagram to guarantee sufficient heat dissipation and to have enough space for removing wires.

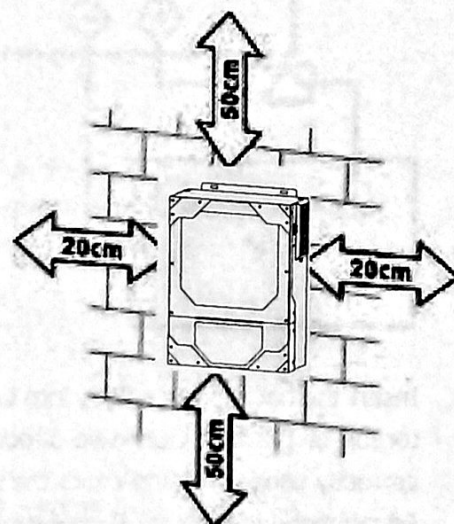

**SUITABLE FOR MOUNTING ON CONCRETE OR OTHER NON-COMBUSTIBLE SURFACE ONLY.**

Install the unit by screwing two screws. It's recommended to use M4 or M5 screws.

### 4.4 Battery Connection

**CAUTION:** For safety operation and regulation compliance, it's requested to install a separate DC over-current protector or disconnect device between battery and inverter. It may not be requested to have a disconnect device in some applications, however, it's still requested to have over-current protection installed. Please refer to typical amperage in below table as required fuse or breaker size.

**WARNING!** All wiring must be performed by a qualified personnel.

 
**WARNING!** It's very important for system safety and efficient operation to use appropriate cable for battery connection. To reduce risk of injury, please use the proper recommended cable as below.

**Recommended battery cable size:**



Model	Wire Size	Cable (mm <sup>2</sup> )	Torque value (max)
2.0KVA 12V	1 x 4AWG	22	2 Nm
3.2KVA 24V	1 x 6AWG	14	2 Nm

Please follow below steps to implement battery connection:

1. Remove insulation sleeve 18 mm for positive and negative conductors.
2. Suggest to put bootlace ferrules on the end of positive and negative wires with a proper crimping tool.




4. Connect all battery packs as below chart.

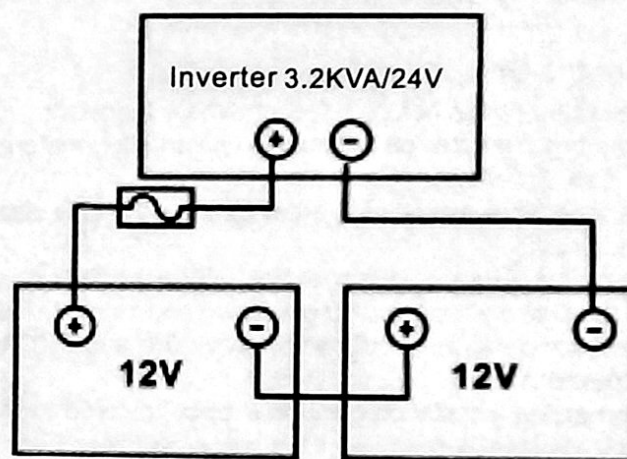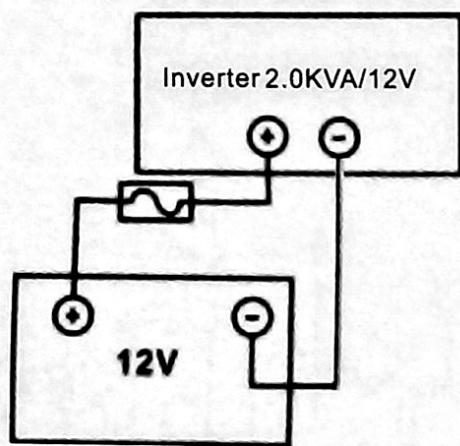

5. Insert the battery wires flatly into battery connectors of inverter and make sure the bolts are tightened with torque of 2 Nm in clockwise direction. Make sure polarity at both the battery and the inverter/charge is correctly connected and conductors are tightly screwed into the battery terminals.

Recommended tool: #2 Pozi Screwdriver

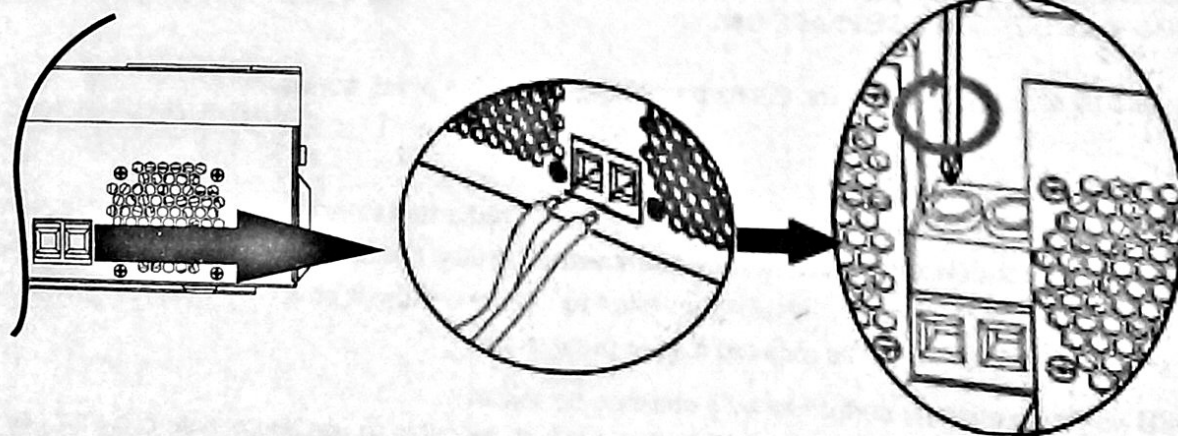

## **WARNING: Shock Hazard**

Installation must be performed with care due to high battery voltage in series.



**CAUTION!!** Before making the final DC connection or closing DC breaker/disconnector, be sure positive (+) must be connected to positive (+) and negative (-) must be connected to negative (-).

#### 4.5 AC Input /Output Connection

**CAUTION!!** Before connecting to AC input power source, please install a **separate** AC breaker between inverter and AC input power source. This will ensure the inverter can be securely disconnected during maintenance and fully protected from over current of AC input. The recommended spec of AC breaker is 10A for 2.0kva and 32A for 3.2kva.

**CAUTION!!** There are two terminal blocks with "IN" and "OUT" markings. Please do NOT mis-connect input and output connectors.

**WARNING!** All wiring must be performed by a qualified personnel.

**WARNING!** It's very important for system safety and efficient operation to use appropriate cable for AC input connection. To reduce risk of injury, please use the proper recommended cable size as below.

#### Suggested cable requirement for AC wires

Model	Gauge	Torque Value
2.0KVA 12V	14 AWG	0.5~0.6Nm
3.2KVA 24V	12 AWG	1.2 Nm


Please follow below steps to implement AC input/output connection:

1. Before making AC input/output connection, be sure to open DC protector or disconnect first.
2. Remove insulation sleeve 10mm for six conductors. And shorten phase L and neutral conductor N 3 mm.
3. Insert AC input wires according to polarities indicated on terminal block and tighten the terminal screws. Be sure to connect PE protective conductor (⊕) first.

⊕ → **Ground (yellow-green)**

L → **LINE (brown or black)**

N → **Neutral (blue)**

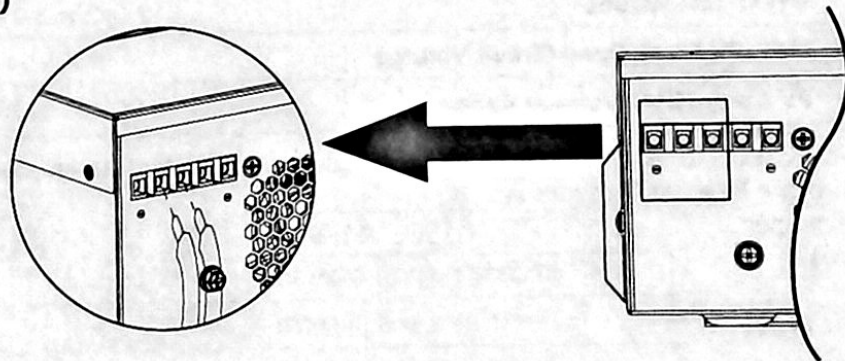


#### **WARNING:**

Be sure that AC power source is disconnected before attempting to hardwire it to the unit.

4. Then, insert AC output wires according to polarities indicated on terminal block and tighten terminal screws.

L → **LINE (brown or black)**

N → **Neutral (blue)**

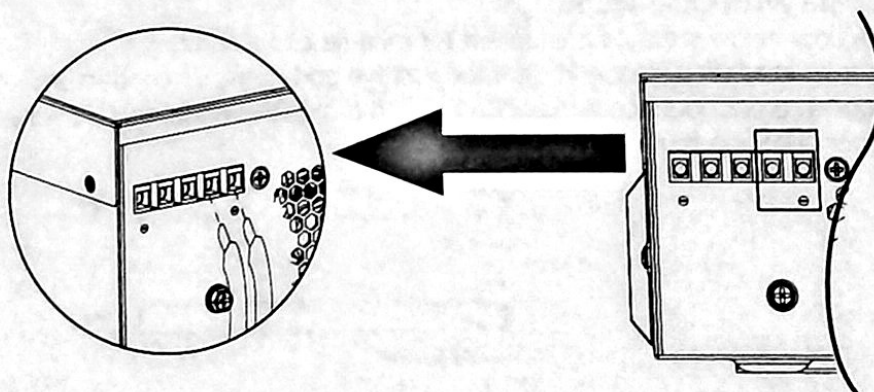

5. Make sure the wires are securely connected.

**CAUTION:** Appliances such as air conditioner are required at least 2~3 minutes to restart because it's required to have enough time to balance refrigerant gas inside of circuits. If a power shortage occurs and recovers in a short time, it will cause damage to your connected appliances. To prevent this kind of damage, please check manufacturer of air conditioner if it's equipped with time-delay function before installation. Otherwise, this inverter/charger will trig overload fault and cut off output to protect your appliance but sometimes it still causes internal damage to the air conditioner.

#### 4.6 PV Connection

**CAUTION:** Before connecting to PV modules, please install **separately** a DC circuit breaker between inverter and PV modules.

**WARNING!** It's very important for system safety and efficient operation to use appropriate cable for PV module connection. To reduce risk of injury, please use the proper recommended cable size as below.

Model	Wire Size	Torque value ( max )
2.0KVA 12V 3.2KVA 24V	1x16AWG	1.2 Nm

#### PV Module Selection:

When selecting proper PV modules, please be sure to consider below parameters:

1. Open circuit Voltage (Voc) of PV modules not exceeds max. PV array open circuit voltage of inverter.
2. Open circuit Voltage (Voc) of PV modules should be higher than min. battery voltage.

INVERTER MODEL	2.0KVA/3.2KVA
Max. PV Array Open Circuit Voltage	450Vdc
PV Array MPPT Voltage Range	90Vdc~430Vdc


Take 250Wp PV module as an example. After considering above two parameters, the recommended module configurations are listed as below table.

Solar Panel Spec. (reference) - 250Wp - Vmp: 30.1Vdc - Imp: 8.3A - Voc: 37.7Vdc - Isc: 8.4A - Cells: 60	SOLAR INPUT		Q'ty of panels	Total input power
	(Min in serial: 4 pcs, max. in serial: 12 pcs)			
	4 pcs in serial		4 pcs	1000W
	6 pcs in serial		6 pcs	1500W
	8 pcs in serial		8 pcs	2000W
	12 pcs in serial		12 pcs	3000W


#### PV Module Wire Connection

Please follow below steps to implement PV module connection:

1. Remove insulation sleeve 10 mm for positive and negative conductors.
2. Suggest to put bootlace ferrules on the end of positive and negative wires with a proper crimping tool.

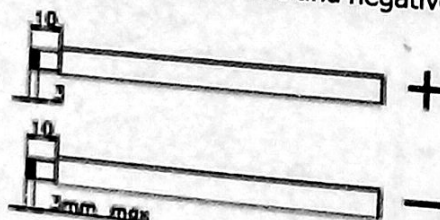

4. Check correct polarity of wire connection from PV modules and PV input connectors. Then, connect positive pole (+) of connection wire to positive pole (+) of PV input connector. Connect negative pole (-) of connection wire to negative pole (-) of PV input connector.  
Recommended tool: 4mm blade screwdriver

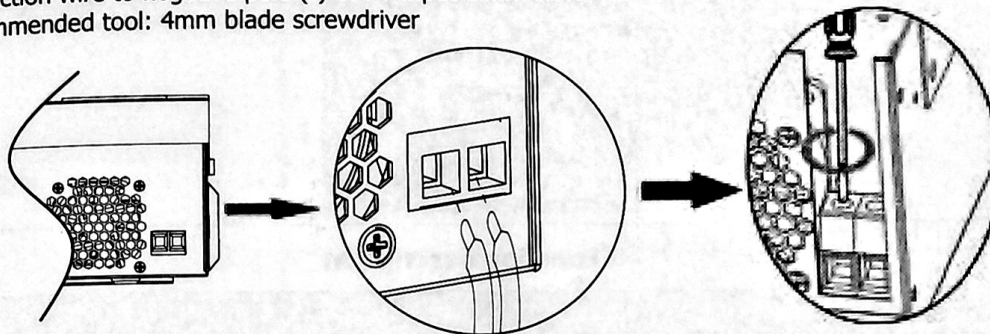


#### 4.7 Final Assembly

After connecting all wirings, please put bottom cover back by screwing four screws as shown below.

## 5 OPERATION

### 5.1 Power ON/OFF

Side view of unit

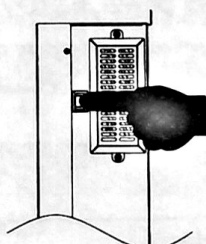


Once the unit has been properly installed and the batteries are connected well, simply press On/Off switch (located on the button of the case) to turn on the unit.

### 5.2 Operation and Display Panel




The operation and display panel, shown in below chart, is on the front panel of the inverter. It includes three indicators, four function keys and a LCD display, indicating the operating status and input/output power information.

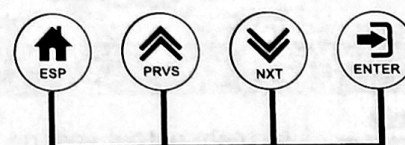LCD display



Function keys

#### LED Indicator

 
 







LED Indicator			Messages
 <b>AC/INV</b>	Green	Solid On	Output is powered by utility in Line mode.
		Flashing	Output is powered by battery or PV in battery mode.
 <b>CHG</b>	Green	Solid On	Battery is fully charged.
		Flashing	Battery is charging.
 <b>FAULT</b>	Red	Solid On	Fault occurs in the inverter.
		Flashing	Warning condition occurs in the inverter.

#### Function Keys









Function Key	Description
ESC	To exit setting mode
UP	To go to previous selection
DOWN	To go to next selection
ENTER	To confirm the selection in setting mode or enter setting mode

### 5.3 LCD Display Icons



 





Icon	Function description	
<b>Input Source Information</b>		
	Indicates the AC input.	
	Indicates the PV input	
	Indicate input voltage, input frequency, PV voltage, charger current (if PV in charging for 2.0KVA models), charger power, battery voltage.	
<b>Configuration Program and Fault Information</b>		
	Indicates the setting programs.	
	Indicates the warning and fault codes.	
Warning:	 flashing with warning code.	
Fault:	 lighting with fault code	
<b>Output Information</b>		
	Indicate output voltage, output frequency, load percent, load in VA, load in Watt and discharging current.	
<b>Battery Information</b>		
	Indicates battery level by 0-24%, 25-49%, 50-74% and 75-100% in battery mode and charging status in line mode.	
In AC mode, it will present battery charging status.		
Status	Battery voltage	LCD Display
Constant Current mode / Constant Voltage mode	<2V/cell	4 bars will flash in turns.
	2 ~ 2.083V/cell	Bottom bar will be on and the other three bars will flash in turns.
	2.083 ~ 2.167V/cell	Bottom two bars will be on and the other two bars will flash in turns.
	> 2.167 V/cell	Bottom three bars will be on and the top bar will flash.
Floating mode. Batteries are fully charged.		4 bars will be on.






In battery mode, it will present battery capacity.

Load Percentage	Battery Voltage	LCD Display
Load > 50%	< 1.85V/cell	
	1.85V/cell ~ 1.933V/cell	
	1.933V/cell ~ 2.017V/cell	
	> 2.017V/cell	
Load < 50%	< 1.892V/cell	
	1.892V/cell ~ 1.975V/cell	
	1.975V/cell ~ 2.058V/cell	
	> 2.058V/cell	


### Load Information

	Indicates overload.			
	Indicates the load level by 0-24%, 25-49%, 50-74% and 75-100%.			
	0%~24%	25%~49%	50%~74%	75%~100%
				

### Mode Operation Information

	Indicates unit connects to the mains.
	Indicates unit connects to the PV panel.
	Indicates load is supplied by utility power.
	Indicates the utility charger circuit is working.
	Indicates the DC/AC inverter circuit is working.

### Mute Operation

	Indicates unit alarm is disabled.
---	-----------------------------------

## 5.4 LCD Setting

After pressing and holding ENTER button for 3 seconds, the unit will enter setting mode. Press "UP" or "DOWN" button to select setting programs. And then, press "ENTER" button to confirm the selection or ESC button to exit.

### Setting Programs:

Program	Description	Selectable option	
00	Exit setting mode	Escape 00 ESC	
01	Output source priority: To configure load power source priority	Utility first (default) 01 USB	Utility will provide power to the loads as first priority. Solar and battery energy will provide power to the loads only when utility power is not available.
		Solar first 01 SUB	Solar energy provides power to the loads as first priority. If solar energy is not sufficient to power all connected loads, utility will supply power to the loads at the same time. Battery provides power to the loads only when any one condition happens: - Solar energy and utility is not available. - Solar energy is not sufficient and utility is not available.
		SBU priority 01 SBU	Solar energy provides power to the loads as first priority. If solar energy is not sufficient to power all connected loads, battery energy will supply power to the loads at the same time. Utility provides power to the loads only when battery voltage drops to either low-level warning voltage or the setting point in program 12.
02	Maximum charging current: To configure total charging current for solar and utility chargers. (Max. charging current = utility charging current + solar charging current)	10A 02 10A	20A 02 20A
		30A 02 30A	40A 02 40A

		50A 02 50	60A (default) 02 60
		70A 02 70	80A 02 80
03	AC input voltage range	Appliances (default) 03 APL	If selected, acceptable AC input voltage range will be within 90-280VAC.
		UPS 03 UPS	If selected, acceptable AC input voltage range will be within 170-280VAC.
05	Battery type	AGM (default) 05 AGM	Flooded 05 FLD
		User-Defined 05 USE	If "User-Defined" is selected, battery charge voltage and low DC cut-off voltage can be set up in program 26, 27 and 29.
06	Auto restart when overload occurs	Restart disable (default) 06 LFD	Restart enable 06 LFE
07	Auto restart when over temperature occurs	Restart disable (default) 07 LFD	Restart enable 07 LFE
09	Output frequency	50Hz (default) 09 50	60Hz 09 60
10	Output voltage	220V 10 220	230V (default) 10 230
		240V 10 240	
11	Maximum utility charging current  Note: If setting value in program 02 is smaller than that in program in 11, the inverter will apply charging current from program 02 for utility charger.	2A 11 2A	10A 11 10A
		20A 11 20A	30A (default) 11 30A
		40A 11 40A	50A 11 50A
		60A 11 60A	

12	Setting voltage point back to utility source when selecting "SBU priority" or "Solar first" in program 01.	Available options in 3.2KVA 24V model:	
		21.0V 12 <sup>BATT</sup> 21.0 <sup>v</sup>	21.5V 12 <sup>BATT</sup> 21.5 <sup>v</sup>
		22.0V 12 <sup>BATT</sup> 22.0 <sup>v</sup>	22.5V 12 <sup>BATT</sup> 22.5 <sup>v</sup>
		23.0V (default) 12 <sup>BATT</sup> 23.0 <sup>v</sup>	23.5V 12 <sup>BATT</sup> 23.5 <sup>v</sup>
		24.0V 12 <sup>BATT</sup> 24.0 <sup>v</sup>	24.5V 12 <sup>BATT</sup> 24.5 <sup>v</sup>
		25.0V 12 <sup>BATT</sup> 25.0 <sup>v</sup>	25.5V 12 <sup>BATT</sup> 25.5 <sup>v</sup>
		Available options in 2.0KVA 12V model:	
		10.5V 12 <sup>BATT</sup> 10.5 <sup>v</sup>	11.0V 12 <sup>BATT</sup> 11.0 <sup>v</sup>
		11.5V (default) 12 <sup>BATT</sup> 11.5 <sup>v</sup>	12.0V 12 <sup>BATT</sup> 12.0 <sup>v</sup>
		12.5V 12 <sup>BATT</sup> 12.5 <sup>v</sup>	13.0V 12 <sup>BATT</sup> 13.0 <sup>v</sup>
		13.5V 12 <sup>BATT</sup> 13.5 <sup>v</sup>	14.0V 12 <sup>BATT</sup> 14.0 <sup>v</sup>
		14.5V 12 <sup>BATT</sup> 14.5 <sup>v</sup>	15.0V 12 <sup>BATT</sup> 15.0 <sup>v</sup>
13	Setting voltage point back to battery mode when selecting "SBU priority" or "Solar first" in program 01.	Available options in 3.2KVA 24V model:	
		Battery fully charged 13 <sup>BATT</sup> FUL	24V 13 <sup>BATT</sup> 24.0 <sup>v</sup>

24.5V	25V
13 <sup>BATT</sup> 24.5 <sub>v</sub>	13 <sup>BATT</sup> 25.0 <sub>v</sub>
25.5V	26V
13 <sup>BATT</sup> 25.5 <sub>v</sub>	13 <sup>BATT</sup> 26.0 <sub>v</sub>
26.5V	27V (default)
13 <sup>BATT</sup> 26.5 <sub>v</sub>	13 <sup>BATT</sup> 27.0 <sub>v</sub>
27.5V	28V
13 <sup>BATT</sup> 27.5 <sub>v</sub>	13 <sup>BATT</sup> 28.0 <sub>v</sub>
28.5V	29V
13 <sup>BATT</sup> 28.5 <sub>v</sub>	13 <sup>BATT</sup> 29.0 <sub>v</sub>
Available options in 2.0KVA 12V model:	
Battery fully charged	12.0V
13 <sup>BATT</sup> FUL	13 <sup>BATT</sup> 12.0 <sub>v</sub>
12.5V	13.0V
13 <sup>BATT</sup> 12.5 <sub>v</sub>	13 <sup>BATT</sup> 13.0 <sub>v</sub>
13.5V (default)	14.0V
13 <sup>BATT</sup> 13.5 <sub>v</sub>	13 <sup>BATT</sup> 14.0 <sub>v</sub>
14.5V	15.0V
13 <sup>BATT</sup> 14.5 <sub>v</sub>	13 <sup>BATT</sup> 15.0 <sub>v</sub>
15.5V	16.0V
13 <sup>BATT</sup> 15.5 <sub>v</sub>	13 <sup>BATT</sup> 16.0 <sub>v</sub>
16.5V	17.0V
13 <sup>BATT</sup> 16.5 <sub>v</sub>	13 <sup>BATT</sup> 17.0 <sub>v</sub>






16	Charger source priority: To configure charger source priority	If this inverter/charger is working in Line, Standby or Fault mode, charger source can be programmed as below:	
		Utility first <b>16 CUE</b>	Utility will charge battery as first priority. Solar energy will charge battery only when utility power is not available.
		Solar first <b>16 CSO</b>	Solar energy will charge battery as first priority. Utility will charge battery only when solar energy is not available.
		Solar and Utility (default) <b>16 SNU</b>	Solar energy and utility will charge battery at the same time.
		Only Solar <b>16 OSO</b>	Solar energy will be the only charger source no matter utility is available or not.
If this inverter/charger is working in Battery mode or Power saving mode, only solar energy can charge battery. Solar energy will charge battery if it's available and sufficient.			
18	Alarm control	Alarm on (default) <b>18 BON</b>	Alarm off <b>18 BOF</b>
19	Auto return to default display screen	Return to default display screen (default) <b>19 ESP</b>	If selected, no matter how users switch display screen, it will automatically return to default display screen (Input voltage /output voltage) after no button is pressed for 1 minute.
		Stay at latest screen <b>19 FEP</b>	If selected, the display screen will stay at latest screen user finally switches.
20	Backlight control	Backlight on (default) <b>20 LON</b>	Backlight off <b>20 LOF</b>
22	Beeps while primary source is interrupted	Alarm on (default) <b>22 AON</b>	Alarm off <b>22 AOF</b>
23	Overload bypass: When enabled, the unit will transfer to line mode if overload occurs in battery mode.	Bypass disable (default) <b>23 BYD</b>	Bypass enable <b>23 BYE</b>

25	Record Fault code	Record enable (default) 25 FEN	Record disable 25 FdS
26	Bulk charging voltage (C.V voltage)	2.0KVA 12V default setting: 14.1V CU 26 BATT 14.1	
		3.2KVA 24V default setting: 28.2V CU 26 BATT 28.2	
		If self-defined is selected in program 5, this program can be set up. Setting range is from 12.5V to 15.5V for 2.0KVA 12V model and 25.0V to 31.5V for 3.2KVA 24V model. Increment of each click is 0.1V.	
27	Floating charging voltage	2.0KVA 12V default setting: 13.5V FLU 27 BATT 13.5	
		3.2KVA 24V default setting: 27.0V FLU 27 BATT 27.0	
		If self-defined is selected in program 5, this program can be set up. Setting range is from 12.5V to 15.5V for 2.0KVA 12V model and 25.0V to 31.5V for 3.2KVA 24V model. Increment of each click is 0.1V.	
29	Low DC cut-off voltage	2.0KVA 12V default setting: 10.0V COU 29 BATT 10.0	
		3.2KVA 24V default setting: 20.0V COU 29 BATT 20.0	
		If self-defined is selected in program 5, this program can be set up. Setting range is from 10.0V to 12.0V for 2.0KVA 12V model and 20.0V to 24.0V for 3.2KVA 24V model. Increment of each click is 0.1V. Low DC cut-off voltage will be fixed to setting value no matter what percentage of load is connected.	
30	Battery equalization	Battery equalization 30 EEN	Battery equalization disable (default) 30 EdS
		If "Flooded" or "User-Defined" is selected in program 05, this program can be set up.	

31	Battery equalization voltage	2.0KVA 12V default setting: 14.6V <u>EU 31 14.6</u>	
		3.2KVA 24V default setting: 29.2V <u>EU 31 29.2</u>	
		Setting range is from 13.0V to 16.2V for 2.0KVA 12V model and 25.0V to 31.5V for 3.2KVA 24V model. Increment of each click is 0.1V.	
33	Battery equalized time	60min (default) <u>33 60</u>	Setting range is from 5min to 900min. Increment of each click is 5min.
34	Battery equalized timeout	120min (default) <u>34 120</u>	Setting range is from 5min to 900 min. Increment of each click is 5 min.
35	Equalization interval	30days (default) <u>35 30d</u>	Setting range is from 0 to 90 days. Increment of each click is 1 day
36	Equalization activated immediately	Enable <u>36 REN</u>	Disable (default) <u>36 Rds</u>
		If equalization function is enabled in program 30, this program can be set up. If "Enable" is selected in this program, it's to activate battery equalization immediately and LCD main page will shows "E9". If "Disable" is selected, It will cancel equalization function until next activated equalization time arrives based on program 35 setting. At this time, "E9" will not be shown in LCD main page.	


## 5.5 DisplaySetting

The LCD display information will be switched in turns by pressing "UP" or "DOWN" key. The selectable information is switched as below order: input voltage, input frequency, PV voltage, charging current, charging power, battery voltage, output voltage, output frequency, load percentage, load in Watt, load in VA, load in Watt, DC discharging current, main CPU Version.

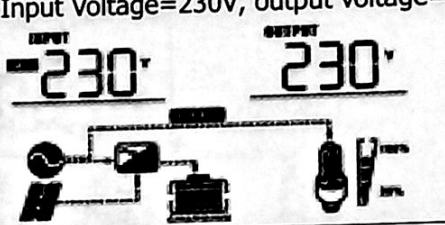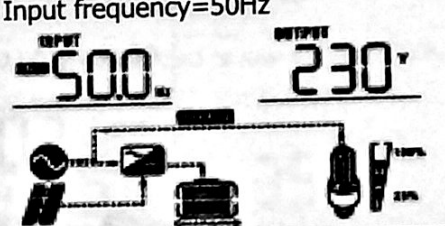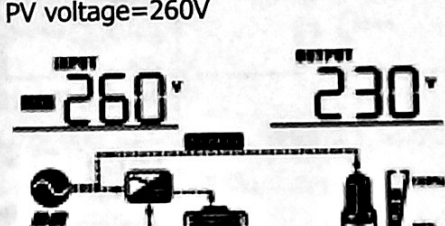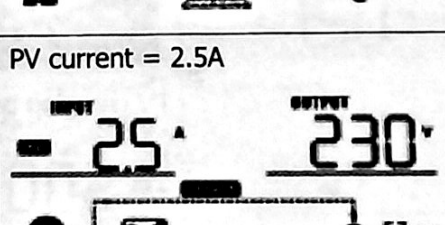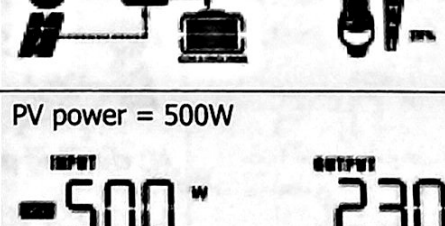
Selectable information	LCD display
Input voltage/Output voltage (Default Display Screen)	Input Voltage=230V, output voltage=230V 
Input frequency	Input frequency=50Hz 
PV voltage	PV voltage=260V 
PV current	PV current = 2.5A 
PV power	PV power = 500W 

Charging current


AC and PV charging current=50A

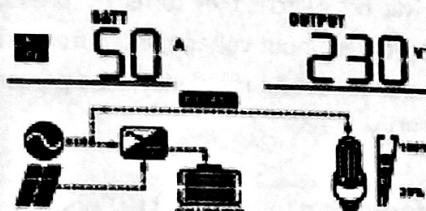

PV charging current=50A

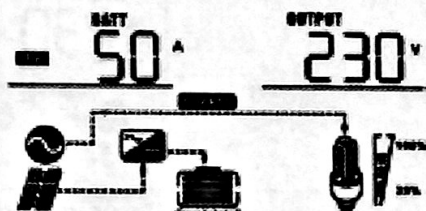


AC charging current=50A

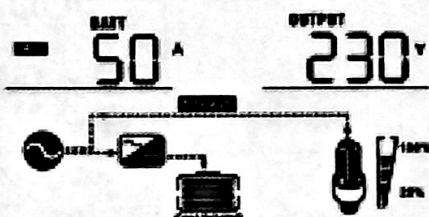


Charging power


AC and PV charging power=500W

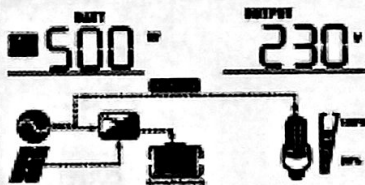

PV charging power=500W

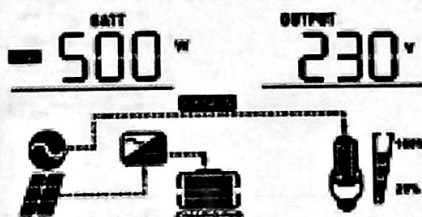








AC charging power=500W

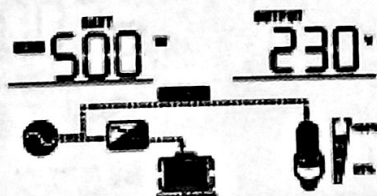



Battery voltage and output voltage


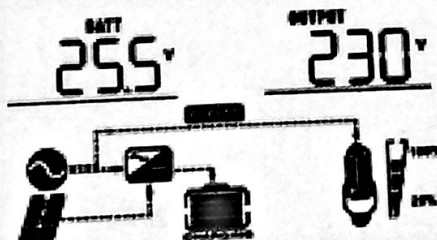


  
 


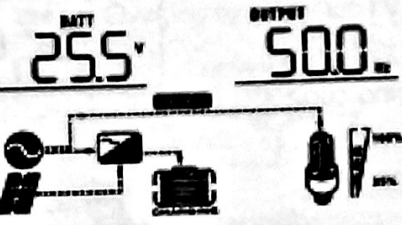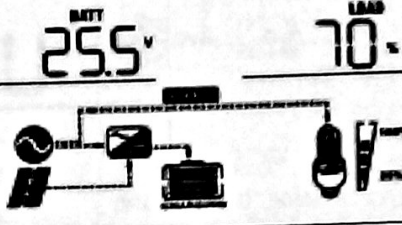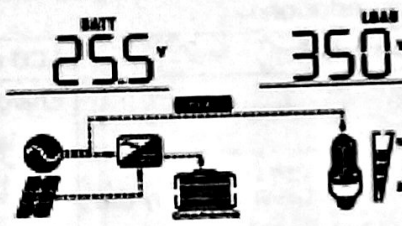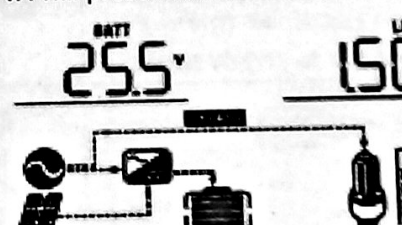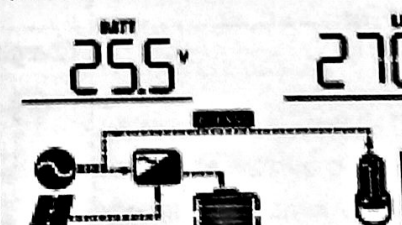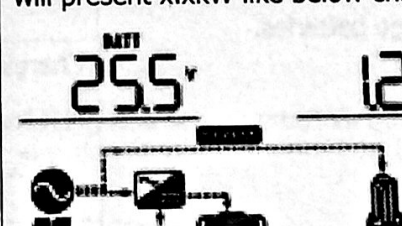Battery voltage=25.5V, output voltage=230V






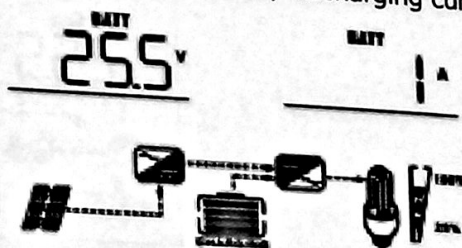


Output frequency	<p>Output frequency=50Hz</p> 
Load percentage	<p>Load percent=70%</p> 
Load in VA	<p>When connected load is lower than 1kVA, load in VA will present xxxVA like below chart.</p> 
	<p>When load is larger than 1kVA (<math>\geq 1kVA</math>), load in VA will present x.xkVA like below chart.</p> 
Load in Watt	<p>When load is lower than 1kW, load in W will present xxxW like below chart.</p> 
	<p>When load is larger than 1kW (<math>\geq 1kW</math>), load in W will present x.xkW like below chart.</p> 

Battery voltage/DC discharging current	Battery voltage=25.5V, discharging current=1A 
Main CPU version checking	Main CPU version 20 11 

## 5.6 Operating Mode Description

Operation mode	Description	LCD display
Standby mode / Power saving mode <b>Note:</b> *Standby mode: The inverter is not turned on yet but at this time, the inverter can charge battery without AC output. *Power saving mode: If	No output is supplied by the unit but it still can charge batteries.	Charging by utility and PV energy. 
		Charging by utility. 
		Charging by PV energy. 
		No charging. 
Fault mode <b>Note:</b> *Fault mode: Errors are caused by inside circuit error or external reasons such as over temperature, output short circuited and so on.	PV energy and utility can charge batteries.	Charging by utility and PV energy. 
		Charging by utility. 
		Charging by PV energy. 
		No charging. 

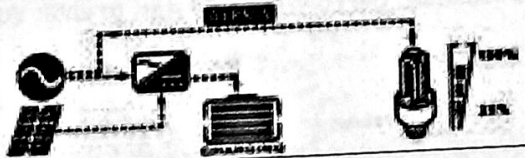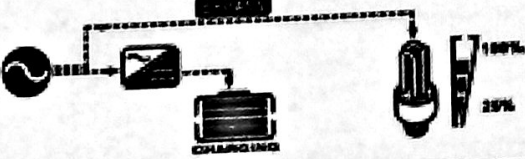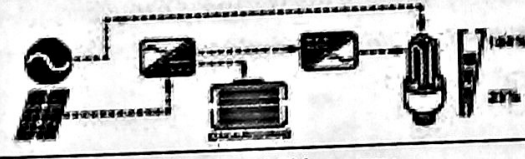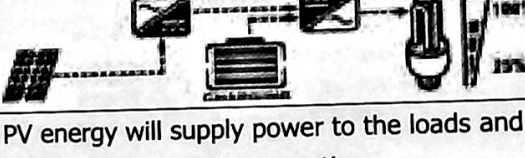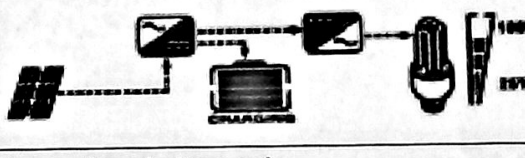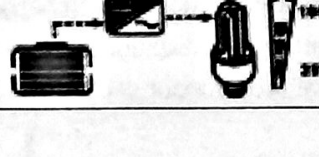Operation mode	Description	LCD display
Line Mode	The unit will provide output power from the mains. It will also charge the battery at line mode.	Charging by utility and PV energy. 
	The unit will provide output power from the mains. It will also charge the battery at line mode.	Charging by utility. 
		If "solar first" is selected as output source priority and solar energy is not sufficient to provide the load, solar energy and the utility will provide the loads and charge the battery at the same time. 
Battery Mode	The unit will provide output power from battery and PV power.	Power from battery and PV energy. 
		PV energy will supply power to the loads and charge battery at the same time. 
		Power from battery only. 

## 5.7 Battery Equalization Description

Equalization function is added into charge controller. It reverses the buildup of negative chemical effects like stratification, a condition where acid concentration is greater at the bottom of the battery than at the top. Equalization also helps to remove sulfate crystals that might have built up on the plates. If left unchecked, this condition, called sulfation, will reduce the overall capacity of the battery. Therefore, it's recommended to equalize battery periodically.


### • How to Apply Equalization Function

You must enable battery equalization function in monitoring LCD setting program 30 first. Then, you may apply this function in device by either one of following methods:

1. Setting equalization interval in program 35.
2. Active equalization immediately in program 36.


### • When to Equalize

In float stage, when the setting equalization interval (battery equalization cycle) is arrived, or equalization is active immediately, the controller will start to enter Equalize stage.

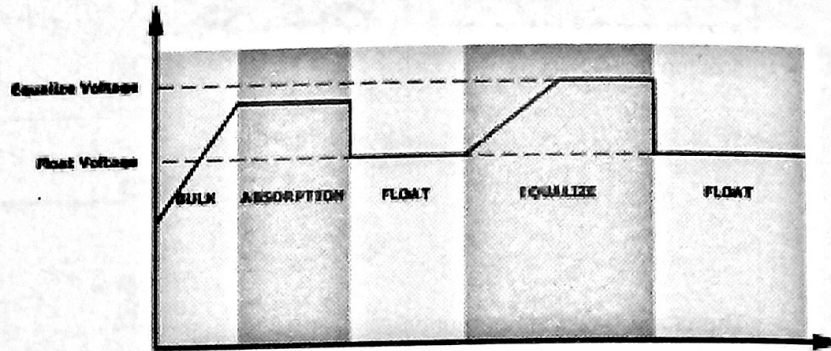


### • Equalize charging time and timeout

In Equalize stage, the controller will supply power to charge battery as much as possible until battery voltage raises to battery equalization voltage. Then, constant-voltage regulation is applied to maintain battery voltage at the battery equalization voltage. The battery will remain in the Equalize stage until setting battery equalized time is arrived.

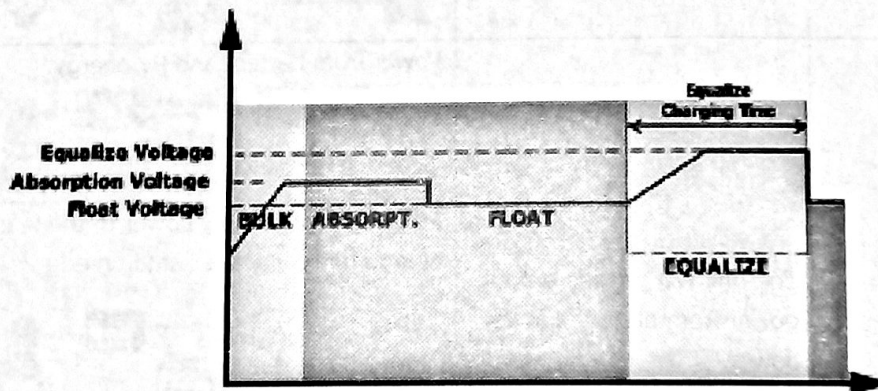


However, in Equalize stage, when battery equalized time is expired and battery voltage doesn't rise to battery equalization voltage point, the charge controller will extend the battery equalized time until battery voltage achieves battery equalization voltage. If battery voltage is still lower than battery equalization voltage when battery equalized timeout setting is over, the charge controller will stop equalization and return to float stage.

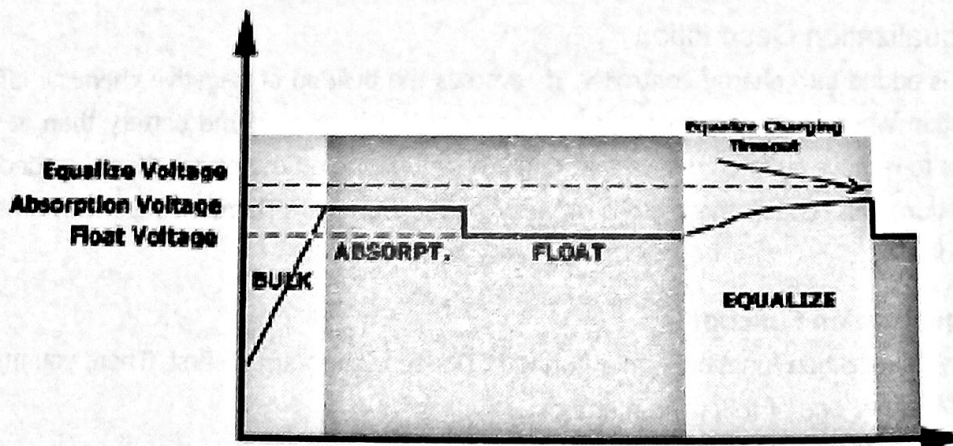

## 5.8 Fault Reference Code

Fault Code	Fault Event	Icon on
01	Fan is locked when inverter is off.	01
02	Over temperature	02
03	Battery voltage is too high	03
04	Battery voltage is too low	04
05	Output short circuited or over temperature is detected by internal converter components.	05
06	Output voltage is too high.	06
07	Overload time out	07
08	Bus voltage is too high	08
09	Bus soft start failed	09
51	Over current or surge	51
52	Bus voltage is too low	52
53	Inverter soft start failed	53
55	Over DC voltage in AC output	55
57	Current sensor failed	57
58	Output voltage is too low	58
59	PV voltage is over limitation	59

## 5.9 Warning Indicator

Warning Code	Warning Event	Audible Alarm	Icon flashing
01	Fan is locked when inverter is on.	Beep three times every second	01 <sup>Δ</sup>
03	Battery is over-charged	Beep once every second	03 <sup>Δ</sup>
04	Low battery	Beep once every second	04 <sup>Δ</sup>
07	Overload	Beep once every 0.5 second	07 <sup>Δ</sup> 
10	Output power derating	Beep twice every 3 seconds	10 <sup>Δ</sup>
15	PV energy is low.	Beep twice every 3 seconds	15 <sup>Δ</sup>
E9	Battery equalization	None	E9 <sup>Δ</sup>


## 6 CLEARANCE AND MAINTENANCE FOR ANTI -DUST KIT (Optional)

### 6.1 Overview


Every inverter is already installed with anti-dusk kit from factory. Inverter will automatically detect this kit and activate internal thermal sensor to adjust internal temperature. This kit also keeps dusk from your inverter and increases product reliability in harsh environment.

### 6.2 Clearance and Maintenance(option)

**Step 1:** Please remove screws as below.

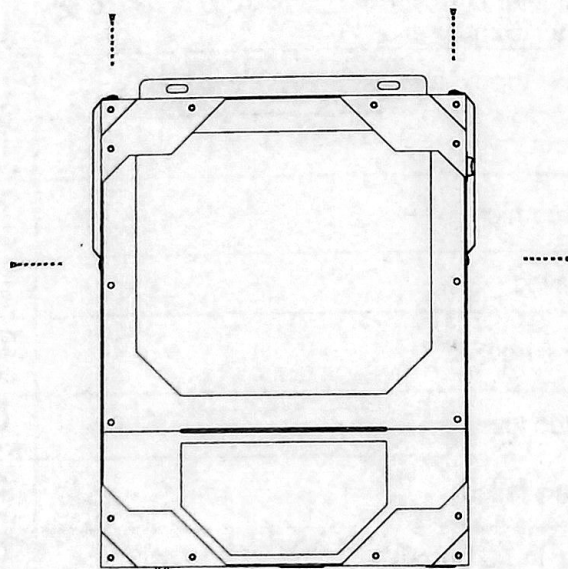

**Step 2:** Then, dustproof case can be removed and take out air filter foam as shown in below chart.

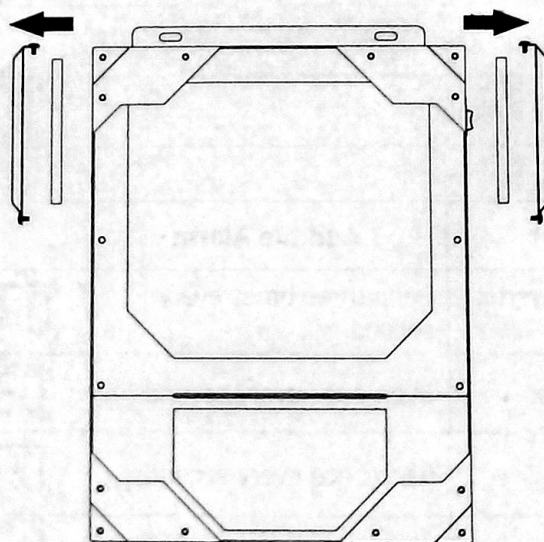

**Step 3:** Clean air filter foam and dustproof case. After clearance, re-assemble the dust-kit back to the inverter.

**NOTICE:** The anti-dust kit should be cleaned from dust every one month.

## 7 SPECIFICATIONS

Table 1 Line Mode Specifications

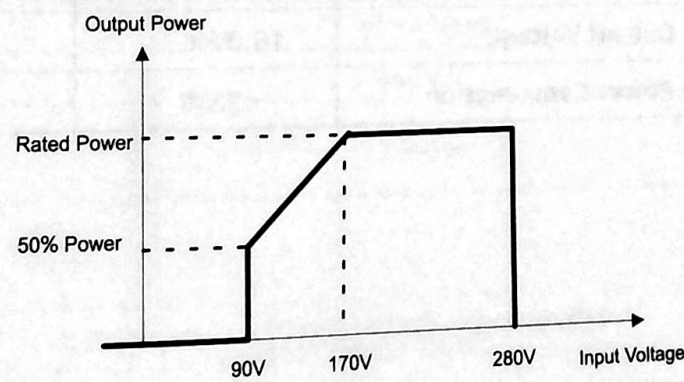
INVERTER MODEL	2.0KVA-12V	3.2KVA-24V
Input Voltage Waveform	Sinusoidal (utility or generator)	
Nominal Input Voltage	230Vac	
Low Loss Voltage	170Vac $\pm$ 7V (UPS); 90Vac $\pm$ 7V (Appliances)	
Low Loss Return Voltage	180Vac $\pm$ 7V (UPS); 100Vac $\pm$ 7V (Appliances)	
High Loss Voltage	280Vac $\pm$ 7V	
High Loss Return Voltage	270Vac $\pm$ 7V	
Max AC Input Voltage	300Vac	
Nominal Input Frequency	50Hz / 60Hz (Auto detection)	
Low Loss Frequency	40 $\pm$ 1Hz	
Low Loss Return Frequency	42 $\pm$ 1Hz	
High Loss Frequency	65 $\pm$ 1Hz	
High Loss Return Frequency	63 $\pm$ 1Hz	
Output Short Circuit Protection	Circuit Breaker	
Efficiency (Line Mode)	>95% ( Rated R load, battery full charged )	
Transfer Time	10ms typical (UPS); 20ms typical (Appliances)	
Output power derating: When AC input voltage drops to 170V, the output power will be derated.	 <p>The graph plots Output Power on the y-axis against Input Voltage on the x-axis. The x-axis has markers at 90V, 170V, and 280V. The y-axis has markers for 50% Power and Rated Power. The power remains at the Rated Power level from 170V up to 280V. Between 170V and 90V, the power decreases linearly to 50% of the Rated Power. Below 90V, the power remains constant at 50% of the Rated Power.</p>	

Table 2 Inverter Mode Specifications

INVERTER MODEL	2.0KVA-12V	3.2KVA-24V
<b>Rated Output Power</b>	2000VA/1600W	3200VA/3000W
<b>Output Voltage Waveform</b>	Pure Sine Wave	
<b>Output Voltage Regulation</b>	230Vac $\pm$ 5%	
<b>Output Frequency</b>	50Hz	
<b>Peak Efficiency</b>	94%	
<b>Overload Protection</b>	5s@ $\geq$ 150% lo ad; 10s@ 110% ~ 150% lo ad	
<b>Surge Capacity</b>	2* rated power for 5 seconds	
<b>Nominal DC Input Voltage</b>	12Vdc	24Vdc
<b>Cold Start Voltage</b>	11.5Vdc	23.0Vdc
<b>Low DC Warning Voltage</b> @ lo ad < 50%	11.0Vdc	22.0Vdc
@ load $\geq$ 50%	10.5Vdc	21.0Vdc
<b>Low DC Warning Return Voltage</b> @ load < 50%	11.5Vdc	22.5Vdc
@ load $\geq$ 50%	11.0Vdc	22.0Vdc
<b>Low DC Cut- off Voltage</b> @ load < 50%	10.2Vdc	20.5 Vdc
@ load $\geq$ 50%	9.6Vdc	20.0Vdc
<b>High DC Recovery Voltage</b>	14.0Vdc	32Vdc
<b>High DC Cut- off Voltage</b>	16.0Vdc	33Vdc
<b>No Load Power Consumption</b>	<25W	<35W

Table 3 Charge Mode Specifications

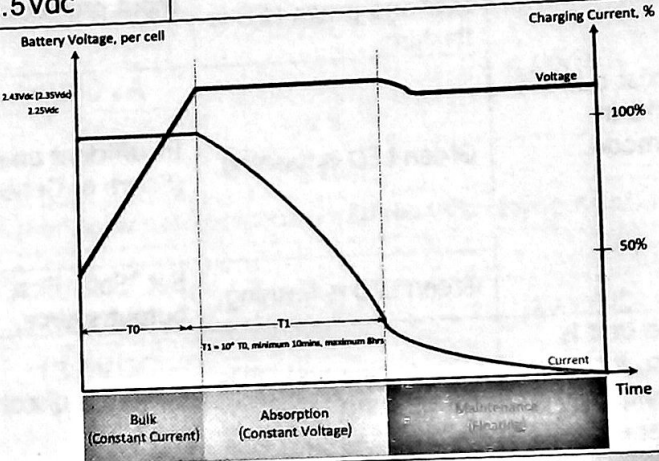
Utility Charging Mode		
INVERTER MODEL		
		2.0 KVA-12V
		3.2KVA-24V
Charging Algorithm		
3-Step		
AC Charging Current (Max)		60Amp (@V <sub>I/P</sub> = 230Vac)
Bulk Charging		60Amp (@V <sub>I/P</sub> = 230Vac)
Voltage	Flooded Battery	29.2
	AGM / Gel Battery	28.2
Floating Charging Voltage		27Vdc
Charging Curve		 <p>The graph shows Battery Voltage (per cell) on the left y-axis (2.25Vdc to 2.43Vdc) and Charging Current (%) on the right y-axis (0% to 100%) against Time on the x-axis. The voltage curve rises during the Bulk phase, plateaus during the Absorption phase, and remains constant during the Maintenance phase. The current curve is high during Bulk, drops to zero at the start of Absorption, and remains at zero through Maintenance. Key time points T0 and T1 are marked on the x-axis. A note specifies T1 = 10* T0, minimum 10mins, maximum 8hrs.</p>
MPPT Solar Charging Mode		
INVERTER MODEL		
		2.0KVA-12V
		3.2KVA-24V
Max. PV Array Power		2000W
Nominal PV Voltage		240Vdc
PV Array MPPT Voltage Range		90~430Vdc
Max. PV Array Open Circuit Voltage		450Vdc
Max Charging Current (AC charger plus solar charger)		80Amp

Table 4 General Specifications


INVERTER MODEL	2.0KVA-12V	3.2KVA-24V
Safety Certification	CE	
Operating Temperature Range	-10° C to 50° C	
Storage temperature	-15° C~ 60° C	
Humidity	5% to 95% Relative Humidity (Non-condensing)	
Dimension (D * W* H) , mm	423X348X172	510X380X185
Net Weight, kg	5.2	6.2

## 8 TROUBLE SHOOTING

Problem	LCD/LED/Buzzer	Explanation / Possible cause	What to do
Unit shuts down automatically during startup process.	LCD/LEDs and buzzer will be active for 3 seconds and then complete off.	The battery voltage is too low (<1.91V/Cell)	1. Re-charge battery. 2. Replace battery.
No response after power on.	No indication.	1. The battery voltage is far too low. (<1.4V/Cell) 2. Internal fuse tripped.	1. Contact repair center for replacing the fuse. 2. Re-charge battery. 3. Replace battery.
Mains exist but the unit works in battery mode.	Input voltage is displayed as 0 on the LCD and green LED is flashing.	Input protector is tripped	Check if AC breaker is tripped and AC wiring is connected well.
	Green LED is flashing.	Insufficient quality of AC power. (Shore or Generator)	1. Check if AC wires are too thin and/or too long. 2. Check if generator (if applied) is working well or if input voltage range setting is correct. (UPS & Appliance)
	Green LED is flashing.	Set "Solar First" as the priority of output source.	Change output source priority to Utility first.
When the unit is turned on, internal relay is switched on and off repeatedly.	LCD display and LEDs are flashing	Battery is disconnected.	Check if battery wires are connected well.
Buzzer beeps continuously and red LED is on.	Fault code 07	Overload error. The inverter is overload 110% and time is up.	Reduce the connected load by switching off some equipment.
	Fault code 05	Output short circuited.	Check if wiring is connected well and remove abnormal load.
		Temperature of internal converter component is over 120°C.	Check whether the air flow of the unit is blocked or whether the ambient temperature is too high.
	Fault code 02	Internal temperature of inverter component is over 100°C.	
	Fault code 03	Battery is over-charged.	Return to repair center.
		The battery voltage is too high.	Check if spec and quantity of batteries are meet requirements.
	Fault code 01	Fan fault	Replace the fan.
	Fault code 06/58	Output abnormal (Inverter voltage below than 190Vac or is higher than 260Vac)	1. Reduce the connected load. 2. Return to repair center
	Fault code 08/09/53/57	Internal components failed.	Return to repair center.
	Fault code 51	Over current or surge.	Restart the unit, if the error happens again, please return to repair center.
	Fault code 52	Bus voltage is too low.	
	Fault code 55	Output voltage is unbalanced.	

## TECHNICAL DATA

Model		XEON 2000VA		XEON 3200VA	
RATED POWER		1600W/2000VA		3000W/3200VA	
Input					
Voltage		230VAC			
Selectable Voltage Range		170~280VAC(For Personal Computers)			
		90~280VAC(For Home Appliances)			
Frequency Range		50 Hz/60Hz(Auto sensing)			
OUTPUT					
AC Voltage Regulation(Batt.Mode)		230VAC±5%			
Surge Power		4000VA		6400VA	
Efficiency(Peak)PV to INV		97%			
Efficiency(Peak)Battery to INV		91%			
Transfer Time		10 ms (For Personal Computers);20 ms (For Home Appliances)			
BATTERY & AC CHARGER					
Battery Voltage		12VDC		24VDC	
Floating Charge Voltage		13.5VDC		27VDC	
Overcharge Protection		16VDC		31VDC	
Maximum Charge Current		60A		60A	
SOLAR CHARGER					
Maximum PV Array Power		2000W		3000W	
MPPT Range @ Operating Voltage		90~430VDC			
Maximum PV Array Open Circuit Voltage		450VDC			
Maximum Charging Current		80A		80A	
Maximum Efficiency		98%			
PHYSICAL					
Dimension,D*W*H(mm)		423X348X172		510X380X185	
Net Weight(kgs)		5.2		6.2	
Communication interface		RS232			
OPERATING ENVIRONMENT					
Mumidity		5% to 95% Relative Humidity(Non~condensing)			
Operating Temperature		0°C~55°C			
Storage Temperature		-15°C~60°C			

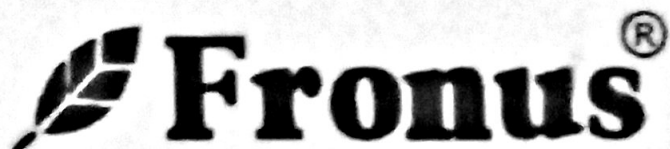

## **INVERTER CHARGER**

**MODEL NAME: XEON 2000VA**

**Color: Yellow and Black**

**Operating Temperature Range: -10~ 50°C**



**92020220630314**

### **Inverter Mode:**

**Rated Power: 2000VA/1600W**

**DC Input: 12VDC, 133.3A**

**AC Output: 230VAC, 50/60Hz, 8.7A, 1Φ**

### **AC Charger Mode:**

**AC Input: 230VAC, 50/60Hz, 11.8A, 1Φ**

**DC Output: 13.5VDC,**

**AC Output: 230VAC, 50/60Hz, 8.7A, 1Φ**

**Maximum AC Charging Current: 60A**

### **Solar Charger Mode:**


**Rated Power: 2000W**

**Nominal operating voltage: 240VDC**

**Max. Solar Voltage (VOC): 450VDC**

**MPPT Voltage range: 90~430VDC**


**Maximum Solar Charging Current: 80A**

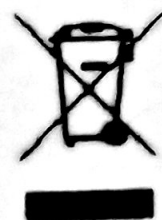



# Fronius

SOLAR ENERGY

 **Fronius®**

MODEL NAME: XEON 2000VA

Color: Yellow and Black

N . W: 4.4Kg

G . W: 5.2 Kg



XE92020220630314

N920-200010-000

DESIGNED IN TAIWAN



**SCAN HERE TO  
VERIFY YOUR PRODUCT**



**SCAN HERE TO DOWNLOAD  
USER MANUAL AND BROUCHER**



**Official service partner**

**[www.btapowersolutions.com](http://www.btapowersolutions.com)**

**Model****XEON 2000VA****Rated Power**

1600W/2000VA

**INPUT****Voltage**

230 VAC

**Selectable Voltage Range**

170-280 VAC (For Personal Computers)

90-280 VAC (For Home Appliances)

**Frequency Range**

50 Hz/60 Hz (Auto sensing)

**OUTPUT****AC Voltage Regulation (Batt. Mode)**230VAC $\pm$ 5%**Surge Power**

4000VA

**Efficiency (Peak)**

97%~94%

**Transfer Time**

10 ms (For Personal Computers)

20 ms (For Home Appliances)

**Waveform**

Pure sine wave

**BATTERY****Battery Voltage**

12.0VDC

**Floating Charge Voltage**

13.5VDC

**Overcharge Protection**

16.0VDC

**SOLAR CHARGER & MAXIMUM CHARGER****Maximum PV Array Open Circuit Voltage**

450VDC

**MPPT Operating Range**

120-430V

**Maximum PV Array Power**

2000W

**Maximum Solar Charge Current**

80A

**PHYSICAL****Dimension, D X W X H (mm)**

423X348X172

**Net Weight (kgs)**

5.2

**Communication Interface**

RS232/WIFI/GPRS

**OPERATING ENVIRONMENT****Humidity**

5% to 95% Relative Humidity(Non-condensing)

**Operating Temperature**

-10°C to 50°C

**Storage Temperature**

-15°C to 60°C



**SCAN HERE TO  
VERIFY YOUR PRODUCT**





**SCAN HERE TO DOWNLOAD  
USER MANUAL AND BROUCHER**